




Sonos Play 5 Mid- Range Speakers Replacement

Replacement of the Mid-Range Speakers in the device.

Written By: Warren Girouard

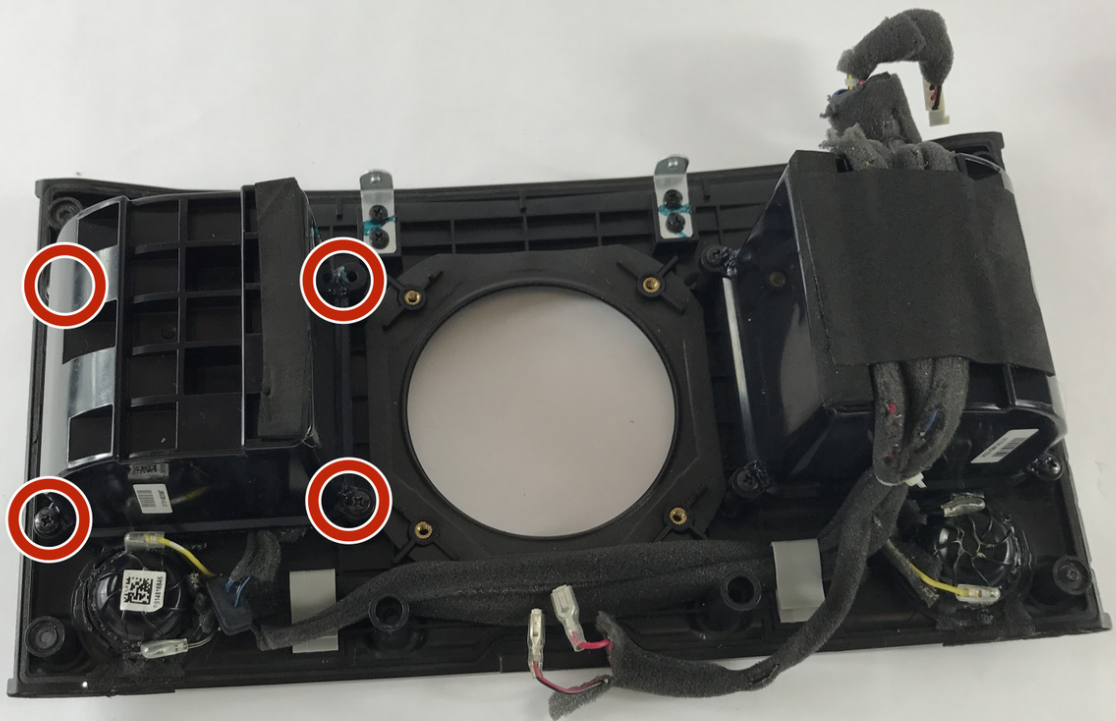

INTRODUCTION

Replacement of the Mid-Range Speakers in the device.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Heavy-Duty Spudger](#) (1)
-

Step 1 — Front Panel Assembly



- Disconnect any power to the speaker and wait a few minutes for the capacitors to fully discharge.
- Flip the speaker upside down.
- ⓘ There may be a rubber foot covering the bottom screws (not included in picture). Remove this by pulling up from one of the corners using a spudger.

Step 2



- Remove eight 10mm Phillips #2 screws
- Remove the bottom panel by pulling upwards.

Step 3



- Flip the device so that the grille is facing up.
- Locate the line on the right side of the speaker where the grill and the plastic meet, and place your plastic opening tool in the gap.
- Run the spudger along the gap, loosening the grille from the plastic. Repeat this process on the left side as well.
- Gently pull up on the grille, removing it from the front panel.

Step 4




- Remove the six 8mm Phillips #2 screws.
- Remove the two 10mm Phillips #2 screws.


Step 5



- Locate the line on the right side where the front panel and back panel meet. Place a plastic opening tool in the gap, and run it along the gap. Repeat this on the left side.
- Use the opening tool to lift the front plate. If a plastic tool is not providing enough leverage, use a metal opening tool.
- Gently pull up on the face plate to ensure it has been detached from the enclosure.


 When pulling on the face plate be cautious because it is still connected by wires on the back of the plate.

Step 6

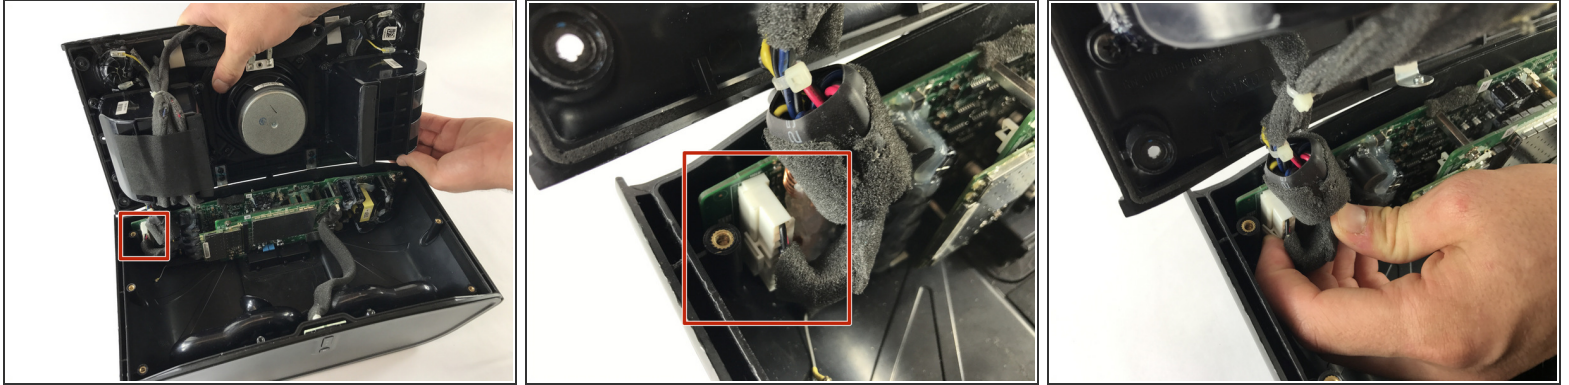


- Lift up the front panel, forming a 90 degree angle with the back panel. Locate the locate ten pin connector shown. This is the wire that connects the front panel to back panel.
- Press down on the small tab located on the connector. With the tab firmly pressed down, pull the connector out from its socket.
- The faceplate assembly is now fully detached from the rest of the speaker.

Step 7 — Mid- Range Speakers

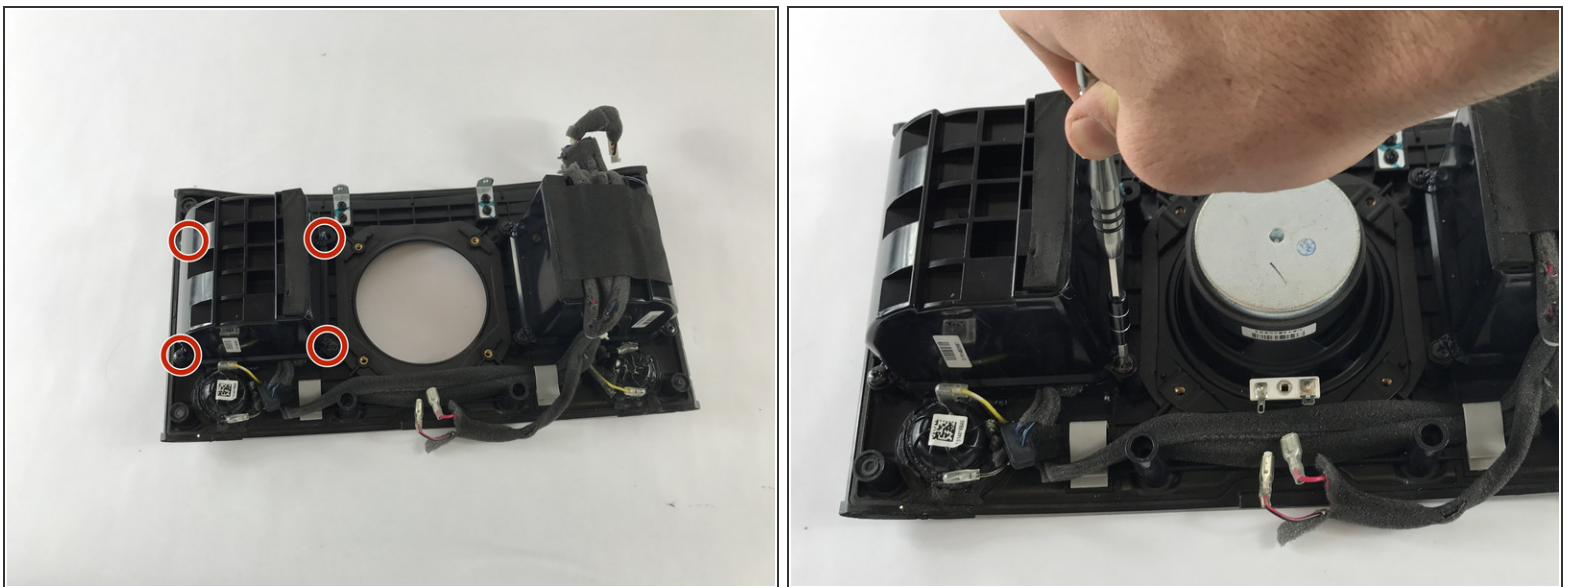



- Remove four 9.5mm Phillips #2 screws.

Step 8

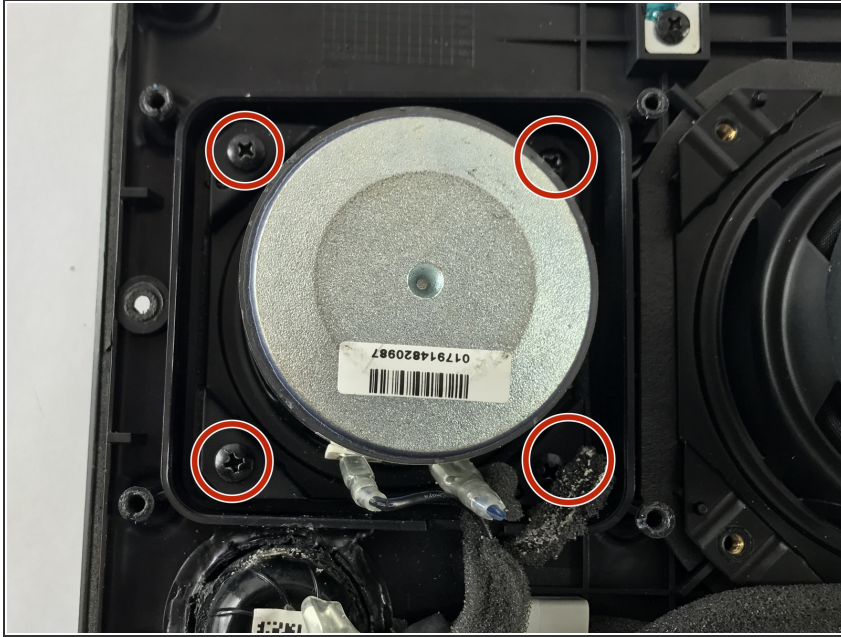


- Remove four 9.5mm Phillips #2 screws.

Step 9

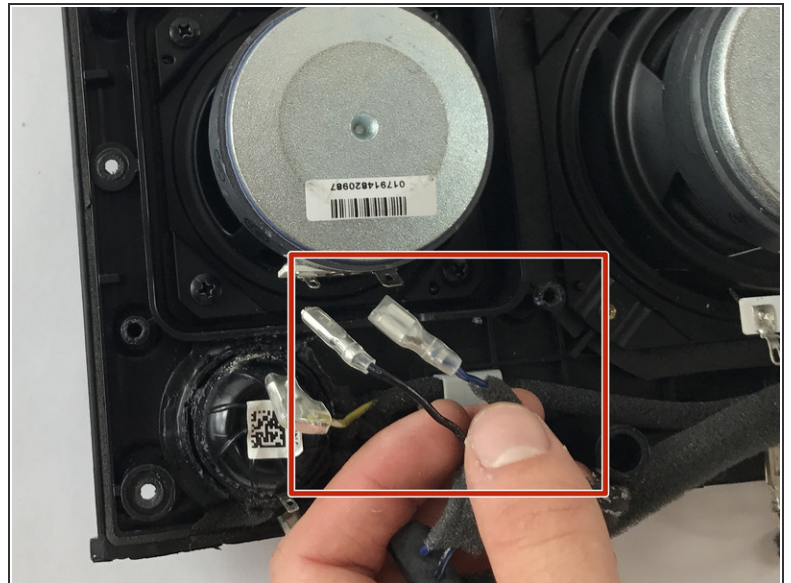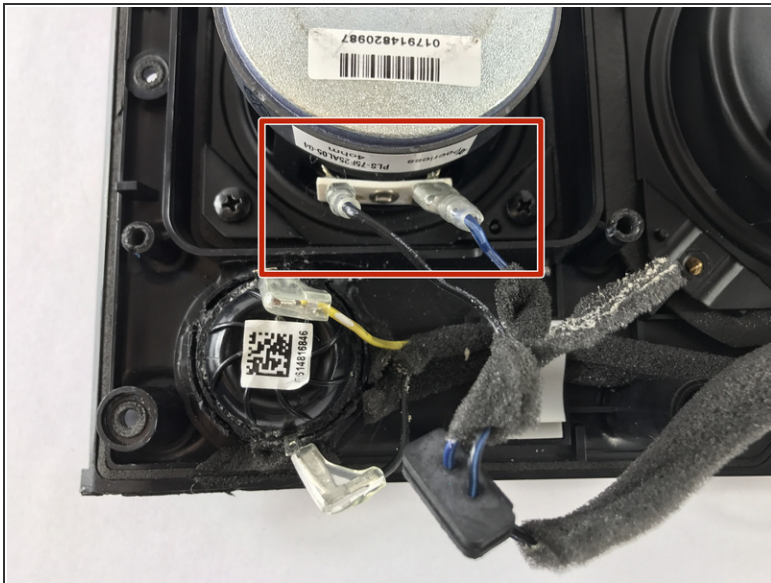



- Unplug the wires connected to the left speaker.

Step 10

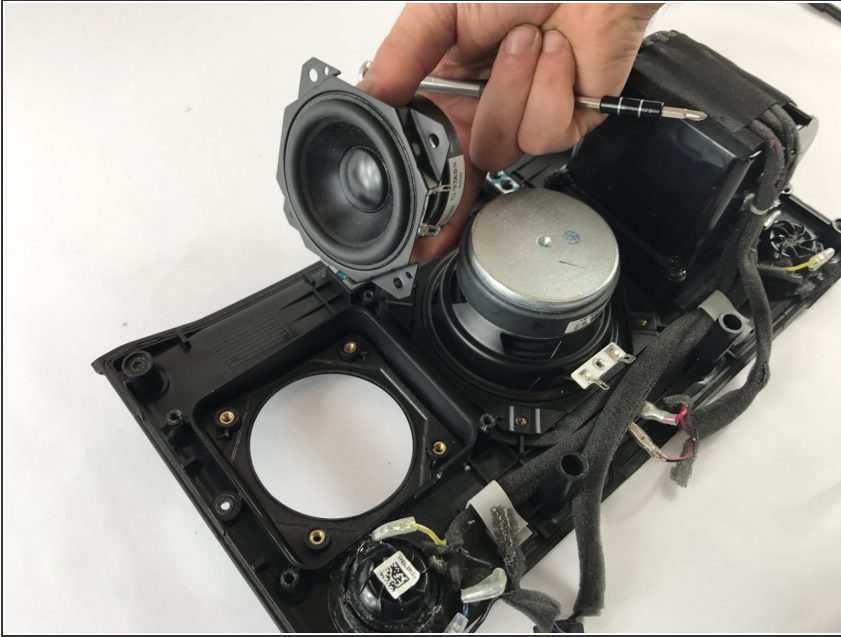


- Pull the left speaker up and away from the front panel.

Step 11

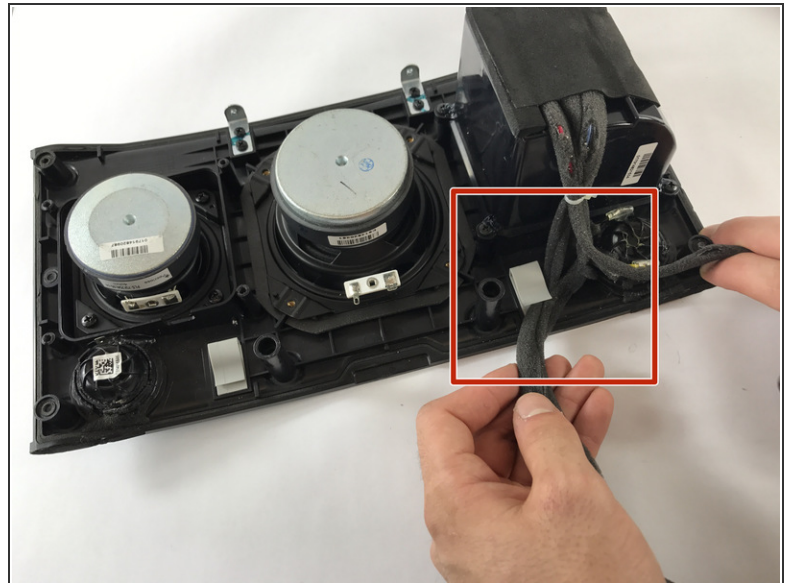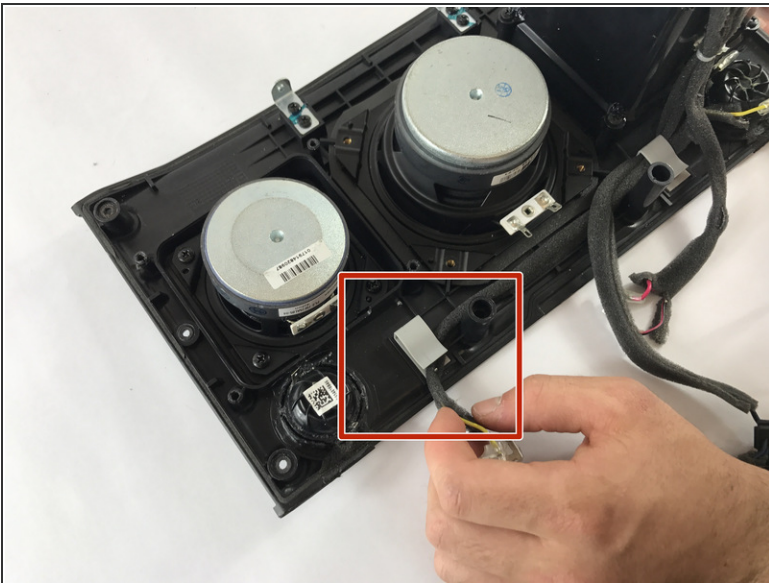

- Remove the wires from the plastic clips on the bottom of the front panel.

Step 12

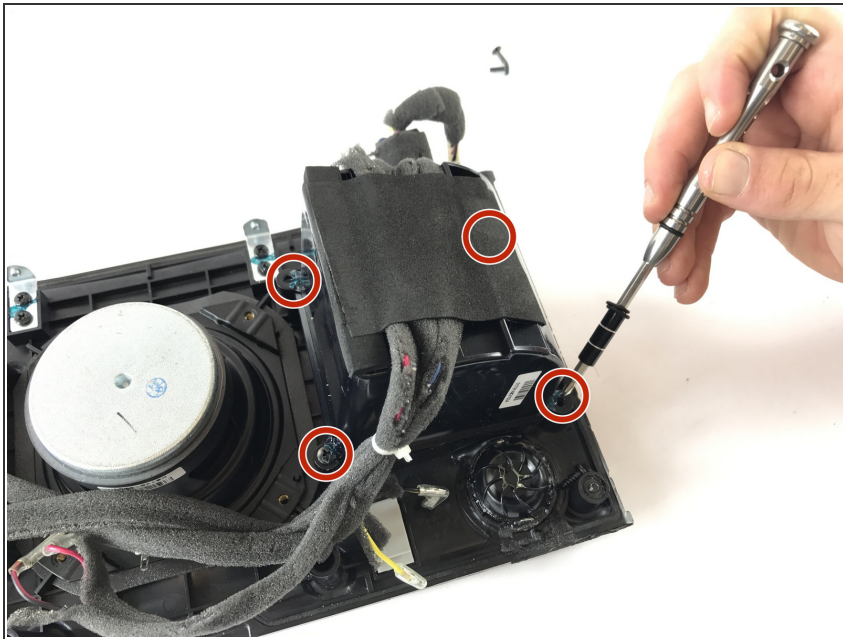

- Remove four 9.5mm Phillips #2 screws.

Step 13




- Remove the plastic speaker cover by lifting up and away.

Step 14



- Remove four 9.5mm Phillips #2 screws.

Step 15

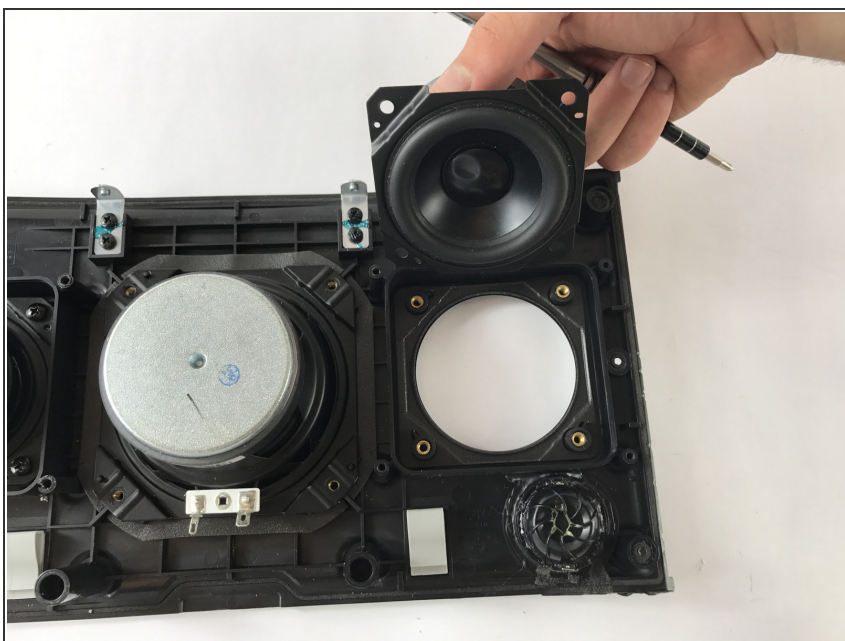

- Remove the right mid-range speaker by pulling up and away from the front panel.

To reassemble your device, follow these instructions in reverse order.